X-Etch Standard Operating Procedure

PLEASE DO NOT USE METAL TWEEZERS WHEN LOAD AND UNLOADING SAMPLES FROM THE XETCH MACHINE

Loading the Sample

- 1.) Prepare the X-etch to load a sample by selecting "Load/Unload Sample" from the Main Menu.
- 2.) The X-etch will ask if you wish to load/change the sample. Select "Yes".
- 3.) After the X-etch has pumped down (This will take several minutes), a dialog box will appear, do <u>NOT</u> select anything in this box yet. First open the X-etch by lifting the metal handle on the platform and load your sample. (Note you may need to press up hard to open the platform)
- 4.) After you have loaded your sample and closed the platform, select "Done" in the dialog box and wait for the X-etch to re-establish a vacuum and return you to the Main Menu.

Etching the Sample

- 5.) From the Main Menu select "Etch Menu".
- 6.) Enter the lot number you wish to use to identify your sample in the logs.
- 7.) Ensure that the current recipe in the top left is set to "Standard".
- 8.) There are many adjustable parameters in the Etch Menu, and each parameter has a slider associated with it. You want to ensure here that your "XeF₂ Pressure" is set to 3.0T and that the "N₂ Pressure" is set to 0.0T.
- 9.) Adjust the "# of Cycles" slider to 22 cycles.
- 10.) Adjust the "Etch Time" slider to 30 seconds.
- 11.) Click "Start Etch" to begin the etch process. The number of cycles in the bottom left corner may read zero for a few seconds but will eventually correct.

Unloading the Sample

- 12.) Once the etch has completed you will be returned to the main menu, from here select "Load/Unload Sample".
- 13.) In the next window select "Yes" when the software asks if you would like to load or change the sample.
- 14.) Once the next dialogue box appears do **NOT** select anything. First open the platform and remove your wafer using the plastic tweezers.
- 15.) Once you have removed your sample and closed the platform, select "Done".